

phil&teds™

your sport
survival guide

evolution is watching
a baby develop.

revolution is watching
the buggy develop,
from newborn
to upright toddler(s)



welcome to the adaptable & delightful
world of phil&teds!

we hope you had some fun with our
“little devils & little angels” game. Keep
it in a safe place - you may need it for
the late, long nights ahead.....!

Please read the **WARNINGS** on the inside back
cover carefully and help us continue improving our
adaptability range by returning your warranty form.

nitty & gritty

bits & bobs.....	2
one: wheeling & dealing.....	3
two: swivel & swerve.....	4
three: up & running.....	5
four: handle & hood.....	6
five: insert baby.....	7

ups & downs

newborn.....	8
toddler.....	9
recline seat.....	9
folding.....	10

ones & twos

baby & toddler.....	11
double.....	12

tricks & treats

buggy covers.....	13
buggy cocoon.....	13
buggy storage.....	14
buggy liners.....	15

cuts & bruises.....17

rights & remedies.....18

return & relax.....19

warnings.....21

check your bits & bobs



Open your sport carton and check that the following bits and bobs are there

- a. 1 x buggy
- b. 2 x rear wheels
- c. 1 x front wheel
- d. 1 x clear backflap (for use when buggy is in newborn position)
- e. 2 x rear wheel axles
- f. 2 x rear guards
- g. 1 x 'z' tool
- h. 1 x hood

You will need:

1 x adult (or someone who follows instructions!)

Now just follow steps **one** to **five**...

rear guards

Your sport buggy has been packed with Rear Guards for the rear wheels.

Attach prior to fitting buggy wheels

To attach


1. Lay buggy flat, as shown.



2. Position one Rear Guard on buggy frame, as shown.

one: wheeling & dealing

3. Using 'z' tool provided fasten to buggy with screws, as shown.
4. Repeat for other rear wheel.

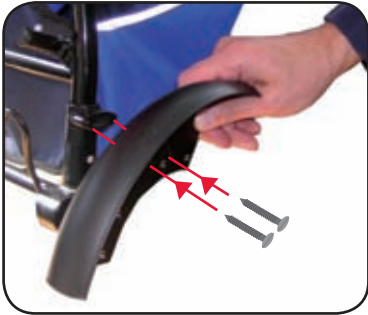


wheeling & dealing

1. Wheels have 'quick release' mechanisms. Press and hold silver button on wheel hub to retract silver nib on axle.



2. Push axle through hole in centre of rear wheel (from the side opposite the brake disk).
3. Insert wheel axle into main buggy axle. Release silver button.

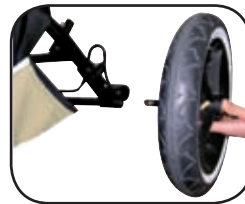

4. Repeat for other wheel (wheels work on either side).



two: swivel & swerve

1. Locate and undo frame lock and lift webbing strap off peg as shown.

(Use long webbing lock when front wheel is on buggy; use shorter webbing lock when front wheel is off).



2. Lift footwell as far as hinge will allow.



3. Get front wheel (the rod is greased so watch out for greasy fingers!)
4. Fully extend swivel lock and insert wheel rod into buggy frame, as shown.

swivel lock



5. Release swivel lock. Check your wheel is in place for use.

to lock/unlock swivel wheel

1. Extend and rotate swivel lock, aligning silver pin with hole in underside of swivel lock knob.
2. Turn wheel towards rear of buggy (parallel with rear wheels). Lock will then click into place.
3. To swivel, extend black swivel lock out and rotate until knob rests on silver pin instead of being inserted into hole.

releasing handle

1. Depress both grey buttons on handle, and tilt handle towards front wheel to release it from its locked position.
2. Lift rear axle a little and pull toward you until you hear a click.



three: up & running

up & running

1. Lift buggy as shown.
2. Keeping fingers clear of main hinge, extend front of buggy. Set all wheels on ground.



3. Lift buggy handle until auto-locks 'a' & 'b' engage (with a click!). Ensure that auto locks are properly engaged.



four: handle & hood



brakes

Always apply brakes when parking your buggy.
Brakes will be on when you unpack your buggy.
Apply brakes before loading/unloading children.

Now you're up and running don't let buggy get away from you - use brakes.

1. Stand behind buggy and lift brake lever up to deactivate. Push down to put brakes on.



go
↑
stop

handle

1. Depress both grey buttons.
2. Move handle up or down to desired position.
3. Release buttons to lock handle in position.



Safety wrist strap – Your buggy can be free wheeling without the brakes so use the safety wrist strap at all times. Just loop it around your wrist.

hood

The sport hood is packed disconnected.

To reconnect:

1. Locate sun hood and hold it facing down, as shown 'a'.
2. Insert crimped wire ends into frame, through eyelets, 'b'.



3. Lay hood back (to top of buggy).
4. Locate red coloured pocket at top of fabric seat and insert rear hood wires into each side, 'c' and 'd'.

five: insert baby

5. Open hood and attach domes, at bottom of hood, to main seat, 'e'.
6. Pull eyelet at top of hood over pegs on each side of frame, 'f'



Note that the windows in the hood are lined with a sun mesh of a lower shade factor than buggy fabric. Always use sun cream and clothing for protection of children in direct sunlight.

Apply brakes and insert baby.
Use safety harness.


1. Unclip buckles on breastplate (circled in red) and place baby in buggy.
2. Set upper strap height to fit snugly over baby's shoulders.
3. Breastplate should fit snugly on baby's chest. (You should be able to fit 2 average sized fingers between straps and baby).
4. Adjust crotch strap length with hook and loop tape.
5. Adjust webbing straps to fit.



WARNING: Ensure harness is used and properly adjusted at all times.

newborn buggy (carry a newborn baby)

1. With buggy set up ready to go, apply brakes.
2. undo clips at back of seat, 'a' & 'b'

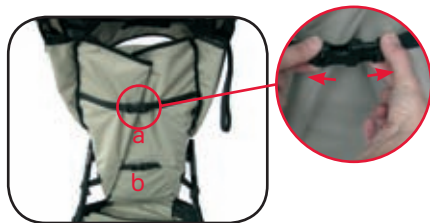

3. undo clips 'c' & 'd' at top of seat and push base down so that headboard is upright.



4. Fully undo zips on each side of buggy seat for a completely flat newborn bed.



5. Lie baby flat in buggy bed and secure baby firmly with adjusted safety harness.

using the clear plastic back flap

1. Attach clear plastic back flap using hook/loop tape at top, '1', and sides, '2', '3' and '4'.



The back flap can be rolled up and held at top using strip of hook/loop tape.

WARNING: Never allow plastic to fall over child.

toddler buggy

(carry a child)

This position is generally comfortable for a child from 4 months, once child is strong enough to support its head.

Setting up from newborn baby position:

1. Do up zips on either side of seat base.
2. Move behind buggy and invert seat base so that clips on base show.
3. Push up seat base and connect 2 clips at back of seat.
4. Join clips at top of seat base to back.



recline seat

1. Undo zips inside seat to recline.

This position is not recommended for children under 6 months. Newborns need to lie flat – refer to newborn buggy

Note: that it is easier to zip up seat without a child in buggy!



to fold

Make sure children are clear of buggy before folding, unfolding or adjusting the buggy.
Avoid injury: watch fingers, especially near main frame hinge.

1. Rotate both auto locks 'a' & 'b' 180°, then press them in toward centre of buggy, whilst holding frame with palms of hands.
2. Let upper frame drop back. Lift buggy by cross bar (under seat) 'c'. Let front wheel fold under frame, and parcel tray concertina.
3. Attach frame lock (use longer of two frame lock straps when front wheel attached)



Ensure that you hold the main frame of buggy when lifting in and out of car (as shown).

double kit accessory

This is often purchased separately with your sport buggy; carton contains the following bits and bobs



- a. 1 x double seat (on frame)
- b. 1 x retaining strap (attached to top of double seat frame)

hinge kit contains

- c. 2 x hinges (R and L - when you stand behind buggy facing forward).

Double kit has a lay-back

setting. To recline:

unzip side zips and

push top of seat

under bar as shown.



baby & toddler buggy

(carry a newborn baby & child)

baby & toddler position requires purchase of double kit accessory, with plastic hinges, used to mount double kit in forward position.

Each plastic hinge is marked L or R (Left and Right when standing behind buggy).

Setting up the baby & toddler buggy:

1. Put buggy in newborn position. Apply brakes.
2. Remove bumper bar from front of buggy by depressing silver buttons on side tubes, and sliding off.
3. Insert hinges into correct sides of double seat – L and R.



4. Insert double seat into side tubes using plastic hinges ensuring silver buttons engage fully through buggy frame holes.
5. Double seat will rest on main frame of buggy.

Buggy can be folded in this position.

WARNING: Never use baby & toddler buggy without the retaining strap.



double buggy (carry 2 toddlers)

1. Put buggy in toddler position.
2. Remove hinges from double seat.



3. Align tubes with supports on back of buggy frame.

4. Push in silver buttons and slide on ensuring buttons fully engage through holes on frame.

Load heavier child in front seat first. Then place lighter child in double seat at back. Always unload rear toddler first.

WARNING Never use double seat without a toddler in front seat.



buggy covers

stormy weather & uv sunny days

1. Unfold cover carefully. Plastic can become brittle and be damaged in cold weather.
2. Place over sunhood.
3. Attach cover to lower frame using snaps on each side of buggy.
4. Pull cover by webbing strap. Place left and right side eyelets over capstan pegs near top of frame (L and R).

Note that uv sunny days also has a mesh backflap - apply in the same way as the clear plastic backflap for newborn buggy.



buggy cocoon

cocoon for sport

The cocoon is a light, portable bassinet which fits quickly and easily in buggy, so you can move a sleeping child to and from buggy with no fuss.

1. With buggy ready to go, apply brakes.
2. Make baby comfortable inside cocoon.
3. Set up buggy in baby buggy position and lie cocoon inside.
4. Face baby towards or away from you.
5. Clip cocoon to buggy using buckles on each side of buggy.
5. Use in baby & toddler position but only with baby's feet forward.



buggy storage

blazing saddles (pair)

Unpack and use hook/loop tape on back to attach to each side of buggy frame.



hangbag & belt

1. Hang over buggy handle and tighten straps.
2. Can also be used around waist - adjust for comfort on hips.



travel bag

When packing buggy into travel bag you can choose to have wheels attached to buggy (for easy wheeling of bag) or remove and pack wheels inside bag.

Leaving the wheels attached

1. Insert folded buggy into travel bag; wheels up, brakes off.
2. Zip bag up leaving wheels and Rear Guards exposed.

Packing with wheels removed

1. Remove wheels and Rear Guards.
2. Place folded buggy in bag.
3. Lay wheels and rear guards on top of buggy before zipping up bag.



bacpac X

Put it on your back or attach it to your buggy.

1. Remove 2 straps looped through D rings, 'a' and 'b', at top of bacpac.
2. Attach clips on straps to bacpac D rings, 'a' and 'b', and attach straps around buggy handle using snaps.
3. Use hook/loop tape on bottom of 2 shoulder straps to attach bacpac to either side of buggy frame.
4. Bottle/snack holder clips into holder on buggy side (right hand side when standing at back of buggy).



buggy liners

buggy bunny

1. Place in buggy and feed harness straps through gaps.
2. Attach hook and loop tape at rear of hood.



woolly & warm

1. Feed harness straps through slots on rear of liner (cut new slots as required).



sleep sack

1. Feed harness straps through slots on rear of sleeping bag.
2. Unzip top fully to use as a liner.
3. Snaps on top allow for larger opening.





smartbuggy



metoo



metro

adapt & survive!™



escape




t2



tott

Phil & Teds Most Excellent Buggy Co Ltd (Phil&Teds), phil and teds, the phil & teds logo, the shapes and designs of the products and the adapt & survive logo are global trademarks of Phil&Teds. Phil & Teds is the owner of all past, present and future intellectual property used and developed in relation to the business and reserves all rights in relation to its intellectual property and the presentation of it. © phil and teds most excellent buggy company ltd

cuts & bruises

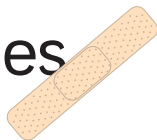

cleaning & caring for your sport

unlike children, your sport likes to stay clean.

sport's coat

The fabric is backed with a water-resistant coating. Brush off dirt. More intense cleaning can be done by hand, in warm water, using a mild natural soap. Rinse out soap. Do not use detergents or bleach. Air dry. Don't leave the sport out in the sun - the fabric is fade resistant but not fade proof (just like your kids!).

sport's body

We recommend that dirt is brushed off the frame and wheels regularly. Clean with a non-abrasive household cleaner and soft cloth. Wash off sand and salt after beach activity. (How would you like it if someone left sand in your knickers?) Always dry frame if wet (no one likes soggy knickers).

tyres & inner tube

The valve is car-size. Manually inflate to 20 - 22 psi max. Releasing air gives a softer ride, but lower pressure reduces tread life. New

inner tubes and tyres are generally available (21/4" x 121/2" tyre) from your dealer, cycle or specialist wheel shops. Standard tyre kits can repair punctures. A flat tyre can result from grit holding the valve open; to check: inflate tyre, deflate rapidly, and re-inflate. Tyres and tubes are not under warranty. Do not over inflate. Tyre pressure is affected by heat especially when inside parked cars. Allow for this .

rubber covers & grip

The foam rubber is not under warranty.

inspect & maintain

Moving parts may need periodic lubrication. Inspect essential components for fraying (esp. webbing straps and safety harness), wear (esp. auto-locks, snap fasteners, button springs, tyres, plastic parts, zips and moving parts), security (esp. autolocks and caps which must not be loose) and freedom of movement (esp. wheels, nuts). Excessive wear can reduce effectiveness and safety.

rights & remedies

our warranty and service policy

We want to give owners confidence in the quality of our products. They are warranted against defects in materials and workmanship for one year from the date of purchase.

If the product has a manufacturing fault we will repair it free of charge. If not practical to repair it we will, at our discretion, replace the part in question*. If the product fails due to wear and tear, accident, neglect or negligence, or is outside the one year warranty, we will happily repair it for a reasonable charge.

details of warranty

Who is covered? Original purchaser buying new product from an authorised dealer. Proof of purchase is required.

What is covered? Workmanship or materials that are deemed faulty, providing the sport has, at all times, been used in normal conditions, in accordance with the instructions and properly maintained.

What is not covered? Second hand product. Modified product. Poorly maintained product.

Normal wear, fading and fabric cuts.

Improper use (by way of example): abnormal use; not following instructions; child left unattended; safety harness not used; excessive load; transport damage i.e. airline or any freight damage.

Customer costs within warranty. The customer is responsible for any inwards freight charge to return the product to the manufacturer or its representative for warranty and or service.

Customer costs outside of warranty. Where proof of purchase is not provided or the product is outside of the one year period. The manufacturer (or agent) reserves the right to charge a service fee and/or charge for parts replaced/repared. A return freight charge may also apply.

Exclusions. Any consequential loss or damage to any person or property directly or indirectly as a result of using the product.

Who do I contact? Please discuss any warranty or service queries with your store of purchase. You will be required to show proof of purchase. They will inform you of the next step.

* The consumer may have additional rights in some countries or states.

Name

Address

Phone

Email

Just a few extra details to help us
adapt & survive!

Your age?

under 25 25-34 35-40 40+

Number of children

1 2 3 3+ soon!

Their ages?

How did you hear about us?

Which most excellent product did you buy?

- | | | |
|-----------------------------------|------------------------------|-----------------------------|
| <input type="radio"/> e3 twin | <input type="radio"/> escape | <input type="radio"/> sport |
| <input type="radio"/> smartbuggy | <input type="radio"/> metro | <input type="radio"/> t2 |
| <input type="radio"/> accessories | <input type="radio"/> metoo | <input type="radio"/> bebe |
| <input type="radio"/> double kit | <input type="radio"/> pepe | <input type="radio"/> tott |

Date of purchase? / /

Rate from 1-10 how likely you would be to
recommend this product to someone else?

1 2 3 4 5 6 7 8 9 10

Why?

Any general suggestions?

We won't give your information to anyone
else but may we inform you of offers?

yes ☐ no ☐

stamp

phil&teds™

102-112 daniell street
newtown
wellington 6021
new zealand

warnings

Keep with your buggy for future reference. There's a pocket at the front of the parcel tray just for this. Injury may result if you do not follow all safety precautions. Injury may result from improper use.

WARNING: Never leave children unattended, it may be dangerous. Take extra care with any child asleep in the buggy.

WARNING: Ensure that all locking devices are engaged before use.

WARNING: Any load attached to the handle affects the stability of the vehicle. Do not hang luggage or carry extra children on the buggy. Do not allow a child to stand on the seat. Do not carry extra weight over that allowed by the instructions, this may make the buggy unstable. Do not place more than 3kg/7lbs in the parcel tray.

WARNING: Always use the safety harness to avoid serious injury from falling or sliding out. Always secure all safety harness straps. Ensure the safety harness is correctly fitted, adjusted and securing child firmly. Make sure children are clear before folding, erecting or adjusting the buggy.

WARNING: Never use baby & toddler buggy without double seat retaining strap engaged.

WARNING: Apply brakes when you park the buggy. Apply brakes when loading or unloading children.

WARNING: Buggy in single or baby & toddler configuration is intended for children up to 4 years or maximum weight of 40kg/88lbs and height of 1.1m or 3.3 feet. In double configuration the recommended max load is 25kg/55lbs in front seat and 15kg/33lbs in rear seat.

WARNING: Check that the seat unit attachment devices are correctly engaged.

WARNING: Do not push a child in the rear seat of a buggy without a heavier child being in the front seat. Do not modify the buggy or use accessories not designed for it. They may be unsafe.

WARNING: Care should be taken if buggy is used on stairs or escalators (banned in some states).

WARNING: The buggy should not be used near an exposed flame.

WARNING: The buggy is not suitable for running, skating, horse riding, water skiing, acrobatics or similar activities. It is not a flotation device. If required, use the D-rings on the waist strap to attach a safety harness.

WARNING: Ensure that fingers are kept well clear of folding mechanism when folding buggy.

adapt & survive!™

safe & sound

we've attained the following safety standards
as product safety is paramount to us:

EN 1888:2003

AS/NZS 2088:2000

ASTM F833-05

AS 4174-1994

head office

ph +64 (4) 380 0833

fax +64 (4) 380 0137

address 102-112 daniell street

wellington new zealand

visit www.philandteds.com

Phil & Teds Most Excellent Buggy Co Ltd (Phil&Teds), phil and teds, the phil & teds logo, the shapes and designs of the products and the adapt & survive logo are global trademarks of Phil&Teds. Phil & Teds is the owner of all past, present and future intellectual property used and developed in relation to the business and reserves all rights in relation to its intellectual property and the presentation of it. © phil and teds most excellent buggy company ltd.